Brunswick

PBA Official Lane Maintenance and Capital Equipment Provider

DIRECT+ Conditioning System

X ENVOY

X AUTHORITY22®

Select Machine

Pattern Information

Date	
Pattern Type	
Pattern Difficulty	
Pattern Designer	
Pattern Volume (ml)	23.64

Surface Information

Surface Type	
Surface Brand	
Age	

Pattern Parameters

Pattern Number	
Pattern Name	Apr-19
Mode	Clean & Oil
Forward Speed	Max Clean
Start Cleaner Spray	0
Start Squeegee	0
Start Oiling	6
Split Pattern	No

Supplies Information

Lane Cleaner		
Cleaner Mixture Ratio	: 1	
Cleaner Transition Distance	43	Authority22
Cleaner Spray End Distance	53	Envoy
Lane Conditioner		

Notes: Lane Pattern Starts on 1st April 2019
Continues untill 5th May 2019
Pattern is a 3.18 : 1 Ration of Medium Difficulty - 40ft in Length

Zone	1	2	3	4	5	6	7	8
Zone End Distance	10	18	27	34	40			
Zone Ratio L	2.5 : 1	3.5 : 1	3.6 : 1	3.5 : 1	### : 1	### : 1	### : 1	### : 1
Zone Ratio R	2.7 : 1	3.6 : 1	3.7 : 1	3.5 : 1	### : 1	### : 1	### : 1	### : 1
Zone Volume (ml)	10.76	6.15	4.32	2.41	0.00	0.00	0.00	0.00
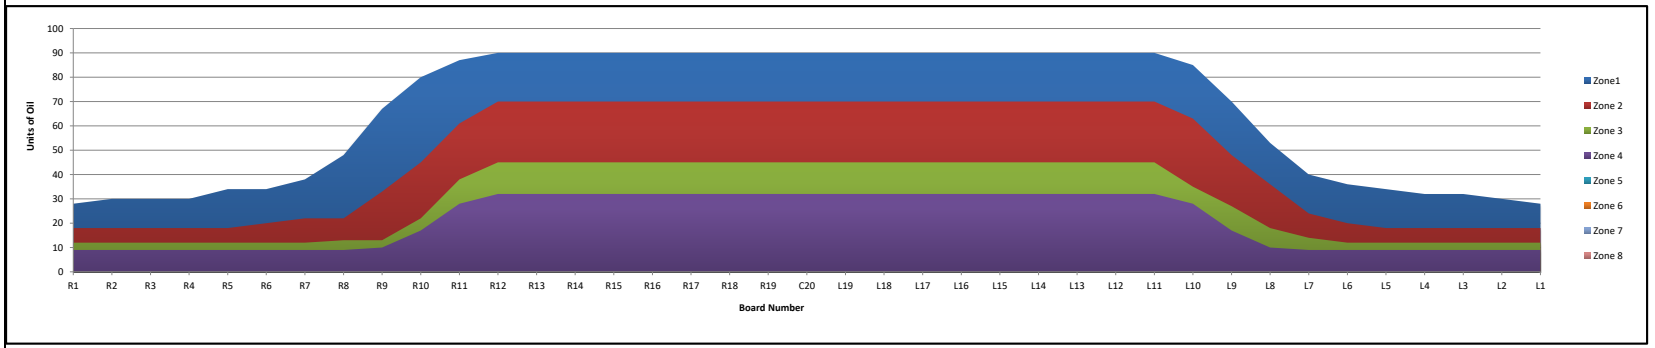
ZONE	7 Pin Side																	Board Number										10 Pin Side								
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1
1	28	30	32	32	34	36	40	53	70	85	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	87	80	67	48	38	34	34	30	30	30	28
2	18	18	18	18	18	20	24	36	48	63	70	70	70	70	70	70	70	70	70	70	70	70	70	70	70	70	70	70	61	45	33	22	22	20	18	18	18	18	18
3	12	12	12	12	12	12	14	18	27	35	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	38	22	13	13	12	12	12	12	12	12	12
4	9	9	9	9	9	9	9	10	17	28	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	28	17	10	9	9	9	9	9	9	9	9
5	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
6																																							
7																																							
8